



### IMPORTANT

Please use this install in conjunction with the SolarSkyLite instructions to complete the entire installation.

**STEP 1** On the roof, locate the centering hole (from Step 4 of the tubular skylight installation) and carefully remove surrounding tiles. Remove enough tiles to accommodate the skirt. Place flashing over the location where the unit will be installed and mark around the flashing footprint onto the furring strips. Remove the portion of the furring strips where the flashing will be installed (allowing the flashing to sit directly on roof sheathing).

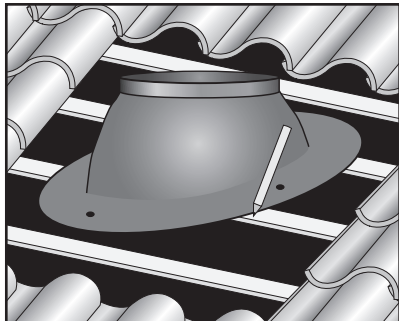


**STEP 2** Outline the diameter of the hole that the pipe will pass through by turning the flashing upside down and marking the inside of the flashing unit. With a reciprocating saw, cut the diameter of the hole a minimum of 1" larger than the area marked in previous step. **NOTE:** A larger hole can be cut to accommodate angled pipe installations.

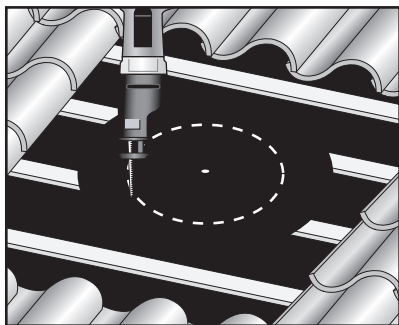


**IMPORTANT:** The light pipe must pass between the roof rafters. DO NOT CUT THROUGH ANY FRAMING MEMBER.

**STEP 3** Caulk underside of flashing with the provided caulking material. Two concentric rings of caulking material is sufficient. Secure flashing with the Phillips head screws provided.

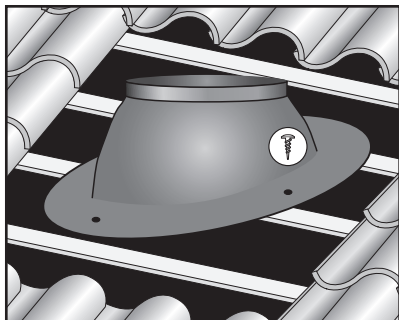


**STEP 4** Install the flashing skirt over the flashing and press down the rubber ring all around the installed flashing.

**STEP 5** For S-tile installations, an optional 3" turret extension can be used. Slip turret over the flashing lip and secure with the (4) screws provided.

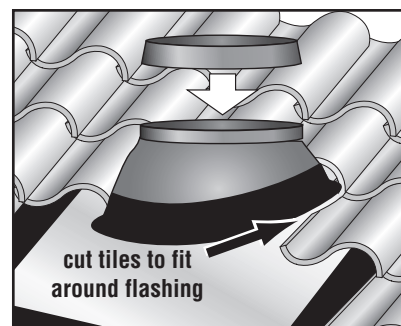

**STEP 6** At the high side of the roof towards the ridge, replace the tiles over the skirt. Cut tiles to fit around flashing. Some furring strips may need to be replaced on top of flashing footprint to support tiles. Replace the tiles on the low side of the roof, but keep skirt above the tiles and reshape the skirt aluminum to form around the tiles.

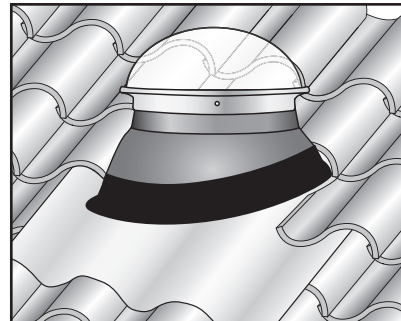

**Return to the SolarSkyLite installation instructions to finish installation.**

*To purchase additional accessories, please  
contact SolarSkyLite at 602.485.3718*

[www.SolarSkyLite.com](http://www.SolarSkyLite.com)